

MODEL	FORCE [N]	POWER SUPPLY	DESCRIPTION
MVE204-65	400	230Vac±10%	long yoke, modulating/ floating control, IP65
MVE206-65	600		
MVE210-65	1000		
MVE215-65	1500		
MVE222-65	2200		
MVE204S-65	400	230Vac±10%	short yoke, modulating/ floating control, IP65
MVE206S-65	600		
MVE210S-65	1000		
MVE215S-65	1500		
MVE222S-65	2200		



APPLICATION AND USE

MVE2xx-65 is a flexible electro-mechanical actuator for the control of two and three way globe valves in:

- heating and cooling systems
- Air Handling Units
- district heating plants
- industrial temperature control systems.

MVE2xx-65 can be controlled either by a proportional (modulating) signal or by an increase/decrease (Floating) signal. It is easy to mount and connect the actuator. Direct mounting is possible to any C2Ai flanged valve. Linkage kits are available for C2Ai threaded valves as well as for valves of other manufacturers (table page 3).

The actuator has a fine resolution (500 steps on the full stroke range) for exacting fluid control and it is able to self-calibrate on a different stroke without the need of any user action (this function is DIP switch selectable on the field).

MVE2xx-65 has intelligent behaviour and alarm functionality in case of unexpected operation, feedback of alarms to the user is provided by LEDs (GREEN and RED) on the control board.

N.B.: Do not use the actuator if not coupled with its relating valve.

MVE2xx-65 is suitable for harsh environment requiring IP65 protection degree.

OPERATION

The actuator translates the control signal (modulating or 3 point floating) from the controller into a valve position. A modern brushless DC motor in the actuator drive a gear train and a worm gear – screw

jack mechanism convert the motor revolutions into accurate and repeatable linear movements.

Control Signal

MVE2xx-65 can be controlled by one of 2 main control types.

- 3 point floating;
- modulating (or proportional) signal with field selectable range (e.g., 0-10Vdc, 2-10Vdc, 0-5/2-6Vdc, 5-10/6-10Vdc and 4-20mA).

Manual Override

There is a manual operation handle on the actuator. When it is lowered (manual override ON), the power supply to the motor power stage circuitry is cut and the motor stops. The actuator can be operated manually and the valve positioned accordingly. The manual override lever latches in position until it is raised again, then board and motor will be powered again. At the end of this operation the actuator moves to initial position (on the basis of DIP n. 1 setting) then it follows the control signal. When the manual override is engaged the GREEN and the RED LED are ON.

Manual operation handle can also be used to modify any DIP switch setting or as re-set function after any alarm occurrence. The actuator is supplied with the manual override lowered (ON).

It is not necessary to remove power supply to modify DIP switch setting, but, in this case, take care of 230Vac voltage.

Feedback position

The actuator utilizes a 2-10V position feedback (look at DIP n. 1 setting).

Calibration


The actuator has both auto and manual stroke calibration, DIP n. 7. In factory delivery the auto stroke calibration is enabled – manual calibration is not necessary unless maintenance is required on the valve or certain alarm functions are desired.

End Point Auxiliary Switches (with accessory DMVE)

End point switches change over when the valve is fully open or closed. They are free contact with 24V AC/DC, 4A max voltage to terminals.

End point switches can be utilized to indicate valve stroke end positions and for relay control of additional plant equipment. When the actuators are controlled individually or in sequence, it is possible to use the end switches to toggle when the valve is fully open or fully closed. The auxiliary switch position according to control signal (Y) is shown in the table below.

Control signal (Y)	Relay KC1	Relay KC2
0-0,5Vdc	KC1 to K2	KC2 to K3
0,5-9,5Vdc	KC1 to K1	KC2 to K3
9,5-10Vdc	KC1 to K1	KC2 to K4

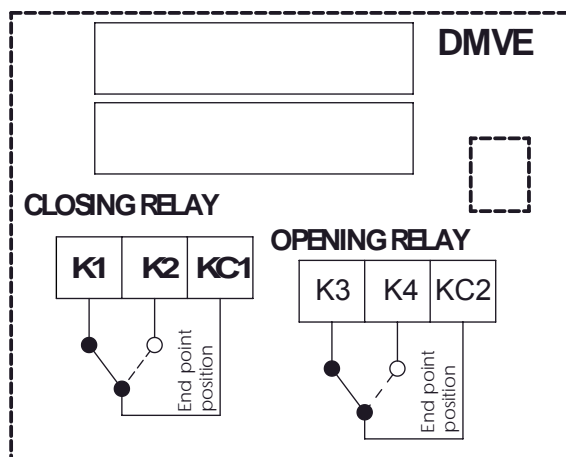

Diagnostic

The actuator is provided with a self diagnostic algorithm able to detect faulty conditions:

- stroke calibration out of range 5-60mm;
- unexpected stall condition (e.g. valve stuck or extra stroke due to actuator link loose);
- voltage supply out of range.

These faulty conditions are signalled via the GREEN and RED LED on the electronic board blinking accordingly (see Diagnostic – Alarm Function Table).

IP65

Protection against water and solid object IP65 is guaranteed by internal seals, IP65 cable gland and the proper engineering of the enclosure.


One IP65 PG13,5 cable gland and one IP65 PG13,5 plug are supplied with the actuator.

TECHNICAL CHARACTERISTICS


DESCRIPTION		MVE204-65 MVE204S-65	MVE206-65 MVE206S-65	MVE210-65 MVE210S-65	MVE215-65 MVE215S-65	MVE222-65 MVE222S-65
Supply voltage F N		230Vac $\pm 10\%$, 50-60Hz				
Power consumption (running)		10VA / 4,5W	13VA / 6W	18VA / 8W	21VA / 11W	25VA / 10W
Power consumption (holding)		8VA / 4W	11VA / 5W	11VA / 5W	13VA / 7W	10VA / 4W
Running time	Modulating	15 s (for valves with stroke from 5 to 15 mm)				
		20 s (for valves with stroke from 15 to 25 mm)				
		30 s (for valves with stroke from 25 to 60 mm)				
	Increase/decrease	60 s				
Stroke		5-60 mm (limited to 30 mm for MVE2xxS-65)				
Force		400 N	600 N	1000 N	1500 N	2200 N
Duty cycle		max 50%/60 minutes				
Analogue input Y M		voltage 0-10V - impedance > 100k Ω (range: 0-10Vdc, 2-10Vdc, 0-5/2-6Vdc, 5-10/6-10Vdc) 500 Ω (range 4-20mA)				
Digital inputs Y1 Y2		connection of Y1, Y2 to M				
Output V+		voltage 16Vdc $\pm 0,5V$, max load 25mA,				
Output U		voltage 2-10Vdc (0-100%), max load 2mA				
Room temperature		operation -10T55°C; storage -20T55°C				
Room humidity		max 90% R.H.				
Protection degree		IP65				
Insulation class						
Standard		Emission/Immunity EMC 2014/30/UE according to EN 61326-1:2013 standard LVD 2014/35/UE according to EN61010-1:2010 standard				
Material		housing: aluminium - cover: ABS plastic				
Colour		aluminium / white				
Weight [kg]		1.7 (MVE2xx-65); 1.6 (MVE2xxS-65)				

ASSEMBLING

The actuator can be mounted with any orientation but never up-side down. When the fluid temperature exceed 120°C the actuator shall be mounted leaning 45°.

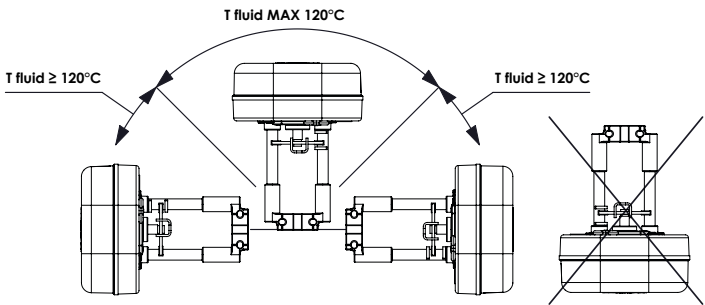

To mount the actuator on to a valve, position the valve stem to the bottom of its travel, slide the actuator onto the valve neck, adjusting with the manual override the screw jack position so the square nut on the valve spindle fits into the groove on the cross bar. Then slide the brace into the groove on the valve neck and secure the nuts.

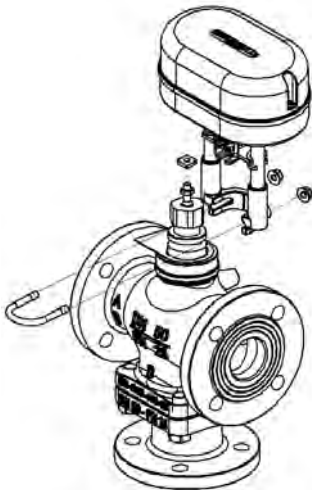

See mounting instructions for full details (MVE2xx_DIM205).

MAINTENANCE

The actuator is maintenance free.

ACCESSORIES


- DMVE** End point auxiliary switches
- 248** Yoke heater 24V, 50W (suggested when the fluid temperature is below 0°C) *
- GMVE** Thermal insulation for MVE actuators *
- GMVE.S** Thermal insulation for MVE.S actuators *
- 89404-05** PG13.5 cable gland for cables with Ø variable between 6 and 12 mm

* It is not possible to install both thermal insulation (Gxxxx) and stem heaters.

LINKAGE	MVE2xx-65	MVE2xxS-65
Current C2AI valves (except for 2TGB.F/3TGB.F PN16)	(not required)	/
VSXT09PBP, VSXT10PBP ***	/	(not required)
2TGB.F/3TGB.F PN16	/	(not required)
C2AI valves with threaded M40 connections (except for VSB/VMB/VSBF/VMBF PN16)	AG51	/
VSB/VMB/ VSBF/VMBF PN16	AG52	AG63
Other manufacturers		
Landis *	AG70-10 AG70-14	/
Danfoss (VR/VF (S) models)	AG60-07	/
TAC DN15-V298	AG 60-08	/
TAC DN15-V2XX/V3XX	AG 60-09	/
Honeywell**	AG 60-10	/
Airtek	AG 60-11/ AG60-12	/
Johnson Controls code VB7816-2111	AG 66	/
Johnson Controls code BM-3018-3300	AG 67	/
Tac Venta	(not required)	/
(/) this model can not be assembled		
(*) AG70-10 for valves having stem Ø 10mm AG70-14 for valves having stem Ø 14mm		
(**) valid for the following models M6: V176A. B, V538C 1/4": V5011A		
(***) assembled only with MVE204S-65 actuator		


ELECTRIC CONNECTIONS

Remove the cover screw with a screwdriver and then remove the cover as shown in the picture beside.
MVE2xx-65 is equipped with a 6 poles removable terminal block for actuator control and with a not removable 2 poles terminal (F and N) for main control; the each pole of the plug is clearly marked and the same label are reported on the electronic board. Before powering up the actuator make sure the plug is properly connected to the electronic board and the label on the plugs and on the board match.

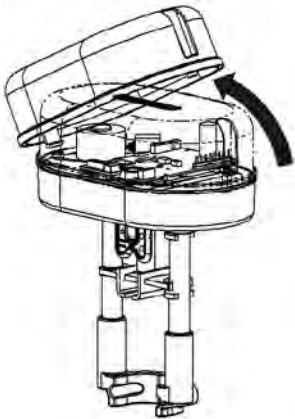

Use cable gland IP65 PG13,5 model.

TERMINAL BLOCK

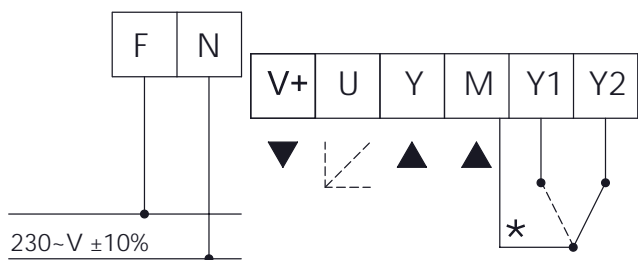


(*) In order to use the floating control the only possible connection is between terminal M and Y1/Y2. Do not connect Y1/Y2 to phase (F) or neutral (N)

Label	Description	Function	Wire Size	Max wire Length
F	230Vac	Power Supply	AWG16 (min 1mm² - max 1.5mm²)	75m
N				
Y	0..10Vdc	Modulating Control Input	AWG20 (min 0.5mm² - max 1.5mm²)	200m
M	0V (Common)			
Y1	Open	Floating Control Input	AWG20 (min 0.5mm² - max 1.5mm²)	200m
Y2	Close			
V+	16 Vdc	Voltage Output (max 25mA)	AWG20 (min 0.5mm² - max 1.5mm²)	200m
M	0V (Common)			
U	2÷10Vdc	Feedback Output Signal	AWG20 (min 0.5mm² - max 1.5mm²)	200m
M	0V (Common)			

Note: To avoid damages to electronic components caused by the PCB bending, do not press too much while fixing the terminal block.

GROUND CONNECTIONS

Connect the ground terminal to the proper screw labelled with the ground symbol as shown in the picture here below.

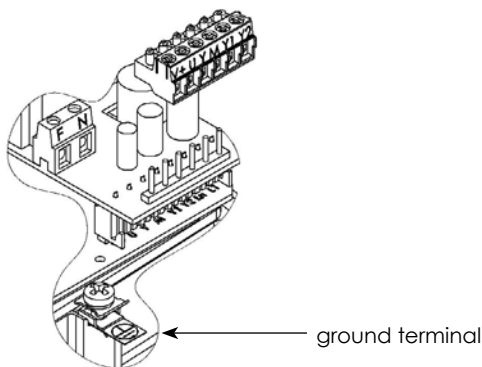


SAFETY PRESCRIPTIONS

230 V products


- Install on the power supply line a protecting device to avoid short circuits (fuse or magneto-thermic) according to the specifications in force;
- in case of accidental removal of the cover to make sure that power is disconnected before working on the actuator or near it;
- the products are maintenance free.

WIRING DIAGRAMS

3-point Floating Control

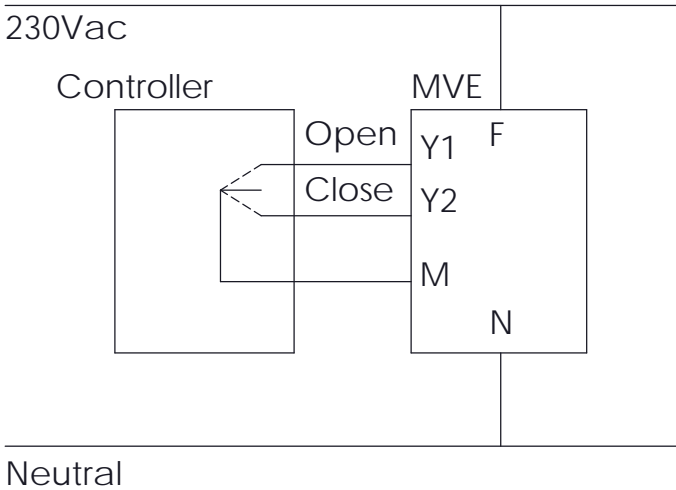

Modulating Control (0-10 Vcc)

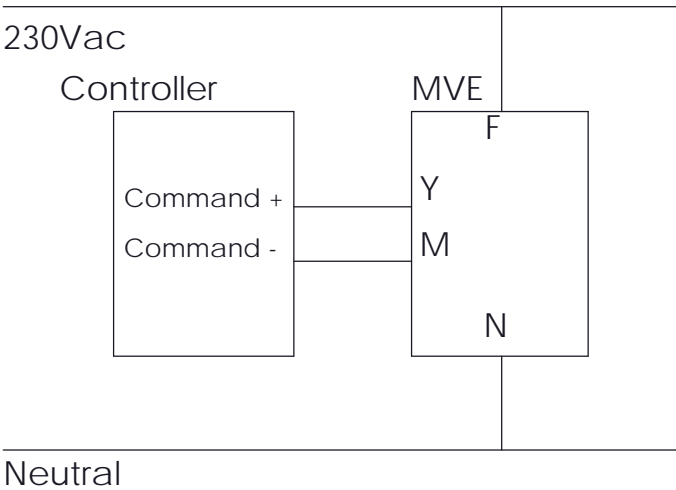


DIP SWITCHES SETTINGS

Set the DIP switches according to tables below. Power down and power up again the actuator or act on the manual override handle to be sure that settings will be recognized.

Factory settings

DIR		REV
MOD		INC
---		SEQ
0 - 10		2 - 10
0 - 5, 2 - 6		5 - 10, 6 - 10
---		4 - 20 mA
AUTO		MAN

OFF ON

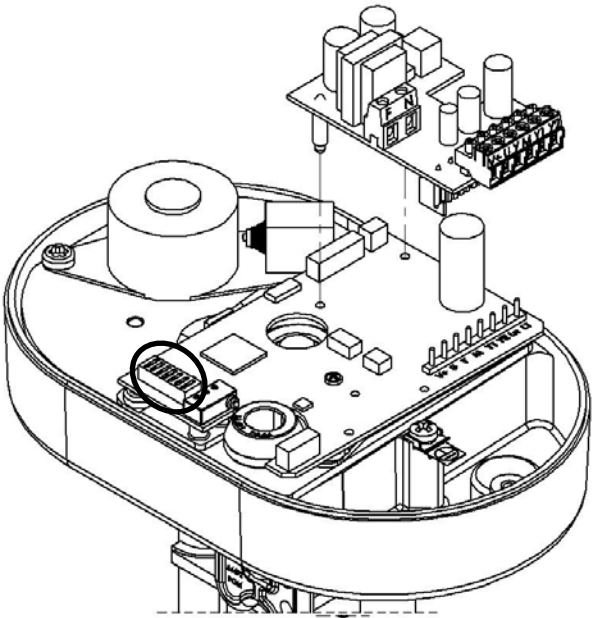


DIP switch	OFF	ON
1	Direct Action U= feedback U = 2V U = 10V	Reverse Action U= feedback U = 10V U = 2V
2	Modulating Control (MOD) (Input between Y [+] and M [-]) 	3 point floating (INC) (Y1 open-extend , Y2 close-retract connected to M)
3	-	Selection of sequence mode, control range defined by DIP n. 5
4	Modulating Control 0-10Vdc (DIP n. 2 OFF only)	Modulating Control 2-10Vdc (DIP n. 2 OFF only)
5	Sequence Control 0-5Vdc with DIP n. 4 OFF only Sequence Control 2-6Vdc with DIP n. 4 ON only (DIP n. 3 ON only)	Sequence Control 5-10Vdc with DIP n. 4 OFF only Sequence Control 6-10Vdc with DIP n. 4 ON only (DIP n. 3 ON only)
6	Voltage Input Signal Vdc (input between Y [+] and M [-])	Current Input Signal 4-20mA (input between Y [+] and M [-]). In this case DIP n. 4 must be set to ON.
7	Automatic Calibration: the actuator updates the stroke range if an unexpected mechanical stop is detected for at least 10s	Manual Calibration: the actuator calibration is started moving the DIP from OFF to ON or vice versa. With DIP in ON in case of extra stroke or if an unexpected endpoint is detected, the actuator will never update the stroke

N°	LEDs behaviour	Error	Actuator use	Actuator behaviour		Typical trouble shooting condition	Reset procedure
				Automatic calibration (DIP N. 7 OFF)	Manual calibration (DIP N. 7 ON)		
1	RED ON	Valve stroke less than 5mm	Calibration/ first installation	The actuator pushes/pulls 2 times (unexpected stall) trying to remove the possible obstacle. After 2 tries an alarm is signalled and the actuator moves to initial position and does not respond to control signal. Stroke value is not updated because out of range	The actuator pushes/pulls 2 times against endpoint during calibration and the actuator moves to the initial position and then it does not respond to the control signal. The actuator keeps the previous stroke	Valve with a stroke length lower than 5mm	Remove power and power up again
2	RED LED quick blinking + GREE ON	Stroke longer than 60mm	Calibration/ first installation	The actuator exits the 60mm stroke range and it moves toward the new stroke limit signalling an anomaly. The actuator pushes/pulls 2 times against the new stroke limit, then it goes back to the initial position still signalling the anomaly until it is not within 60mm. The actuator does not calibrate the stroke after 10s (wrong range)	The actuator exits the 60mm stroke range and it moves toward the new stroke limit signalling an anomaly. The actuator pushes/pulls 2 times against the new stroke limit, then it goes back to the initial position still signalling the anomaly until it is not within 60mm. The actuator does not calibrate the stroke after 10s (wrong range)	Valve with a stroke length longer than 60mm	Remove power and power up again
3	RED Quick Blinking	Unexpected stall within the calibrated stroke range	normal operation	The actuator tries 5 times against the new stall condition and then after 10s the actuator updates the new stroke length	The actuator tries 5 times against the new stall condition. At the end of the attempts the fault will be signalled. The actuator does not update the new stroke length, but after 60s makes other attempts to verify the stall condition	Valve stuck	Inverted control signal
4	RED Quick Blinking	Stroke longer than expected	Normal operation	The actuator moves toward the new stall condition with a lower speed; after 10s the actuator updates the new stroke value	The actuator moves toward the new stall condition with a lower speed; after 10s the actuator does not update the new stroke value	Stem connection loose or valve damaged	Inverted control signal
5	RED slow Blinking	Low Power Voltage	Normal operation	The actuator is still working but performance cannot be guaranteed	The actuator is still working but performance cannot be guaranteed	1. Wrong transform size	Correct Voltage Power
						2. Unstable pow	
6	RED slow Blinking	High Power Voltage	Normal operation	The actuator is still working but performance cannot be guaranteed	The actuator is still working but performance cannot be guaranteed	1. Wrong transform size	Correct Voltage Power
						2. Unstable pow	

STANDARD LEDs BEHAVIOUR

N°	LED behaviour	Actuator status
1	GREEN ON	The actuator arrived at the extreme point of the stroke read
2	GREEN BLINKING	The actuator arrived at the intermediate point of the stroke read
3	RED GREEN BLINKING	The actuator is reading the stroke or it is going to initial position
4	RED GREEN ON	Manual control ON, the actuators ignores the control signal. ATTENTION! The electronic board is electrically supplied

DIMENSIONS [mm]

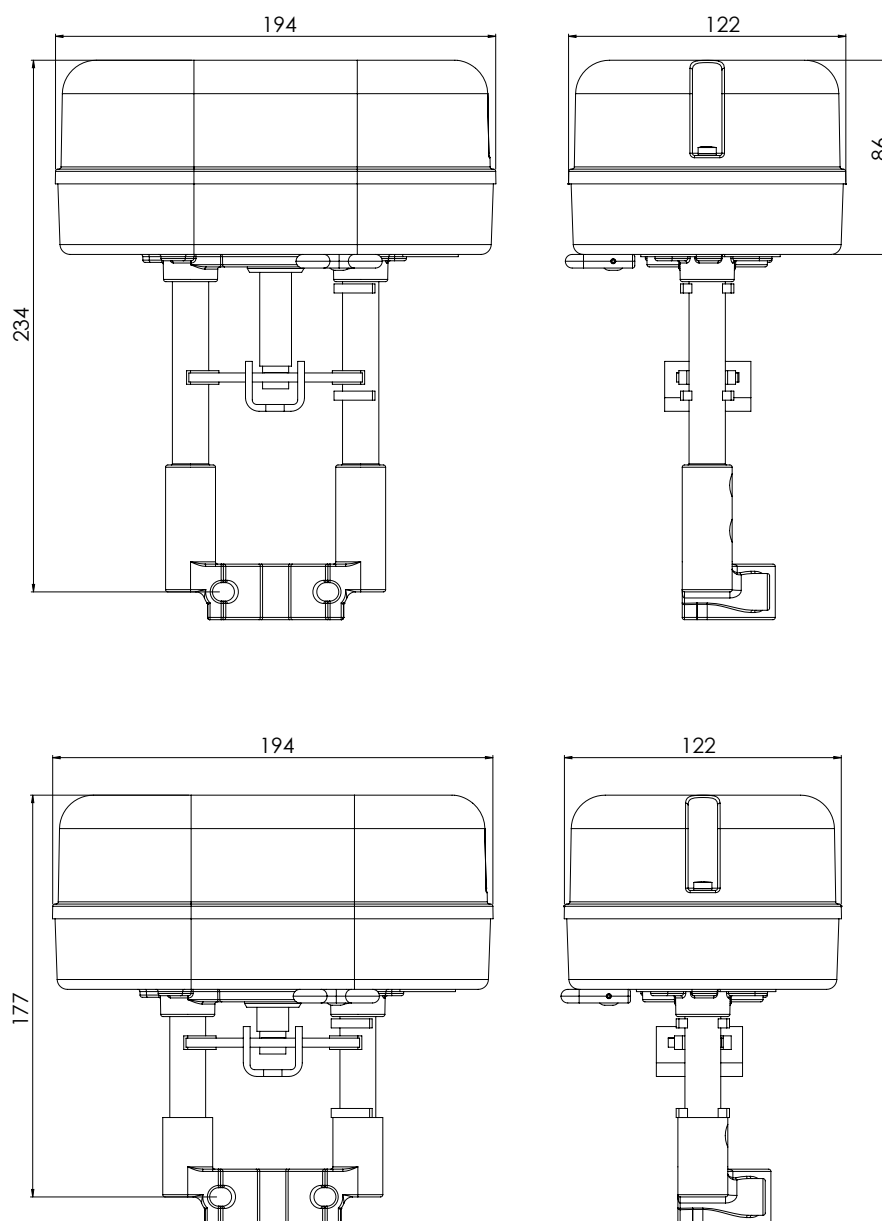

The performances stated in this sheet can be modified without any prior notice